



*Model 777 All Metal
Decorative Hose Reel Storage Box
Owner's Manual*



**Visit our website: www.libertygardenproducts.com or
call us toll free at 1-866-820-5805**

Liberty Garden Products, Inc.
500 Indeneer Dr. Suite 9
Kernersville NC 27284

Please read these instructions thoroughly before assembling.

Estimated assembly time: 5 minutes

Tools Need: Phillips head screwdriver; adjustable wrench

Important

WARNING! Keep hands clear while raising or lowering the top cover to avoid injury.

*Turn water off when not in use

 
*Do **NOT** expose the unit to freezing temperatures with water remaining in the plumbing system.

*Do **NOT** attempt to disassemble the water system or it could cause leakage.

*Do **NOT** sit on top of the unit. It could damage the lid.

Parts List

Your parts will be located inside your Decorative Hose Box.

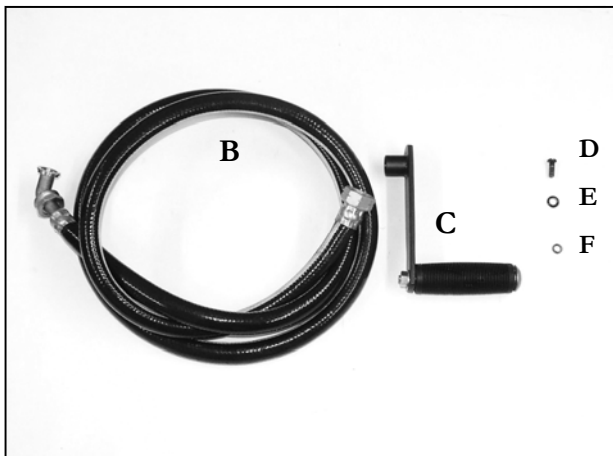


- A. Hose Box (1-Not pictured)
- B. LEADER HOSE (1)
- C. CRANK HANDLE (1)
- D. CRANK HANDLE BOLT (1)
- E. CRANK HANDLE WASHER (1)
- F. CRANK HANDLE
LOCK WASHER (1)

IMPORTANT:


LAYOUT ALL PARTS AND FASTENERS. MAKE SURE ALL PARTS ARE ACCOUNTED FOR. IF ANY PART IS MISSING PLEASE CONTACT LIBERTY GARDEN PRODUCTS AT **1-866-820-5805**. **DO NOT CONTACT THE RETAILER**. YOU CAN ALSO VISIT OUR WEBSITE, **WWW.LIBERTYGARDENPRODUCTS.COM**, FOR MORE INSTRUCTIONS, PICTURES AND HELPFUL HINTS.

ASSEMBLY INSTRUCTIONS

 1. Align the holes in the crank handle (C) with crank handle shaft. The placement of the crank handle fasteners goes in the following order: Crank handle lock washer (F), Crank handle washer (E), then fasten with the Crank handle bolt using screw driver (D).
See Figure 1.

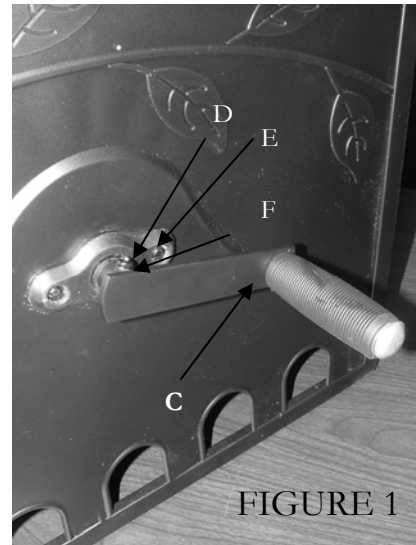


Leader Hose Connection

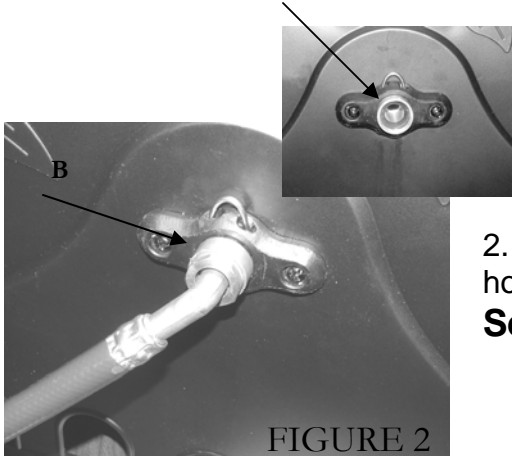 


2. Screw the leader hose (B) to water supply side of the hose box. Lightly tighten using an adjustable wrench.
See Figure 2.

 3. Attach your garden hose to the hose connection on the spool. **Make sure to feed your hose thru the hose guide first.** Then attach your garden hose.
See Figure 3.

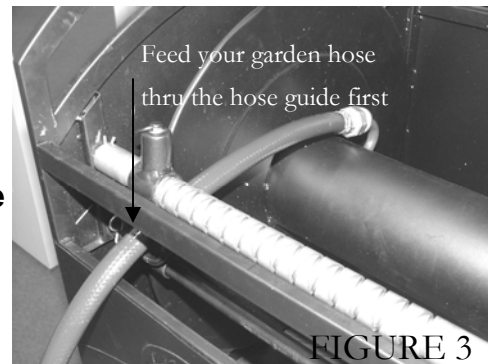

Helpful Hints

 1. To move the hose guide without turning the crank handle, lift the pin up. This will let you move the guide along the worm gear. Pin UP=Unlock, Pin Down=Locked **See Figure 4**
2. The chain gears and the worm gear should be kept lubricated with a small amount of grease or silicone spray.
3. **Turn water off when not in use.** Drain water out of the unit to prevent freezing.

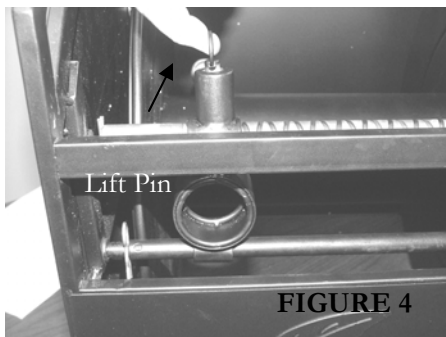

Warranty & Care

Our guarantee is as functional and straight-forward as our products. Since we design and build our products to provide you with many years of satisfaction, all Liberty™ products are guaranteed against defects in materials and workmanship.

In the unlikely event that a problem arises as a result of a defect in our materials or workmanship, we will promptly repair or replace the item at our expense. All we require is that you contact us first and we'll take it from there. It is important to note that our guarantee is not an unconditional guarantee for the life of the product.

Liberty™ hose stands and reels are made from the finest materials available under our exacting manufacturing standards. But, like any other product, it is not indestructible. Therefore, our guarantee does not cover:

- Product damage that is a result of abuse, misuse, or mishandling. (Exposing the unit to freezing temperatures with water remaining in the reel plumbing system voids the unit warranty.).
- Incidental damage or consequential damages or injury to persons or to other property not purchased from us due to the use of our product.
- Do **NOT** consume water from garden hose. It is not fit for human consumption.
- Do **NOT** leave water running though the reel while not in-use or unsupervised.

Rust

Your Liberty™ hose reel will give you many seasons of reliable and functional hose storage. As with any steel product, there is always the chance for rust developing over time. Your Liberty™ hose reel finish is designed for industrial applications, but even the toughest of coatings can be compromised by scratches. Such minor surface damage can occur in shipping despite our best efforts. We have found that most scratches occur during assembly and/or installation (in the case of wall mounted hose reels). If the base metal is exposed to the elements long enough, rust will develop. Use a clear coat paint at the end of each season to prevent rusting.

*If there is damage to the product that occurred as a result of shipping, you should file a damage claim with the carrier.

*As with any product, it should be expected that component parts - particularly moving parts, seals, hose, and connectors will wear with use and over time may need to be replaced or refurbished. This type of normal wear and tear is naturally not covered by our guarantee, but we will always be happy to provide you with prompt, high quality service and replacement parts at a nominal cost.

*This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. (Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you).

You will find that we apply the same standard of excellence to our customer service as we do to our products.

Warning! The hose and brass couplings contain lead , a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. Do NOT place the product in your mouth.



“Liberty” is a registered trademark of Liberty Garden Products, Inc. Kernersville, NC. All Rights Reserved. 2011