

Replacing the Swivel's O-rings

- Take the retaining clip off using snap ring pliers. The swivel comes apart into two sections. See picture below.
- Inside are two O-rings. Remove the O-rings from the swivel shaft and replace with new O-rings. Spray the O-rings with a silicone spray or some type of lubricant.
- Put the swivel back together and attach a new retaining clip using snap ring pliers.

Note: If your model uses a 4000 swivel or if you have an older 704-aluminum swivel, you can purchase the Danco #12 O-ring locally. If you have the 4009, 4010 or 4007 brass swivel, you can purchase the Danco #11 O-ring locally. The retaining clip size is $\frac{3}{4}$ ".

If your swivel is corroded and/or O-rings don't fix the leak, a replacement swivel maybe needed. Try cleaning the inside of the swivel first. We recommend lubricating the o-rings seasonally to prevent them from drying out.



If you have any questions, call us at 1-866-820-5805 Monday thru Friday, 9 am to 5 pm EST

or email us at customerservice@libertygardenproducts.com

