

8. Attach handle (G) to crank handle (J) using handle bolt and nut. Tighten securely. Attach crank handle to pipe on end of spool. Teflon tape should be on end of pipe to prevent leaking. **Fig. 7.**



Fig. 7

9. Attach wheels (C) by sliding the Axle (F) through the axle bushing. Slide wheel over axle, attach washer and nut. Repeat for other wheel and tighten. Inflate tire to 20 PSI.

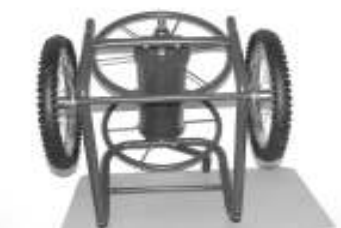


Fig. 8

10. Slide U-Handle (D) over the frame extensions and align the holes. Insert bolts (M) through handle holes and attach wing nuts (N). Hand tighten. **Fig 9.**



Fig. 9

11. Attach the Leader hose (E) to the end of the swivel. **DO NOT OVERTIGHTEN. Fig. 10**



Fig. 10

12. **ATTACHING YOUR GARDEN HOSE:** Attach your hose to the brass swivel. Loop the hose over the spool end to avoid kinking. **Fig 11.**



Fig 11

14. Your hose cart is now ready to use. Attach the end of the leader hose to your water supply.

Model 880 and 1180 Two Wheel Hose Cart Instruction Manual



Visit our website: www.libertygardenproducts.com or call us toll free at 1-866-820-5805.

Liberty Garden Products, Inc.

500 Indeneer Drive, Suite 9, Kernersville NC 27284


General Care and Maintenance

To help delay rust, repaint any parts of the unit from which paint has been scraped. Use a weather proof paint to seal fasteners (bolts , nuts). If the unit is exposed to lawn fertilizer, thoroughly rinse the entire unit. Fertilizer will damage the unit if not removed. Do not expose cart plumbing or inlet hose to freezing temperatures with water present.


Tools Required: Two adjustable Wrenches ,Screwdriver, Rubber Mallet.

Estimated assembly time: 30 minutes.

Parts List

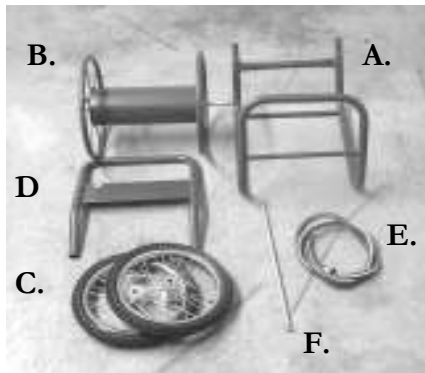

- A. Frame (1 Unit)
- B. Spool (1)
- C. Tires (2)
- D. U-Handle (1)
- E. Leader Hose (1)
- F. Axle with washers/nuts. (1)

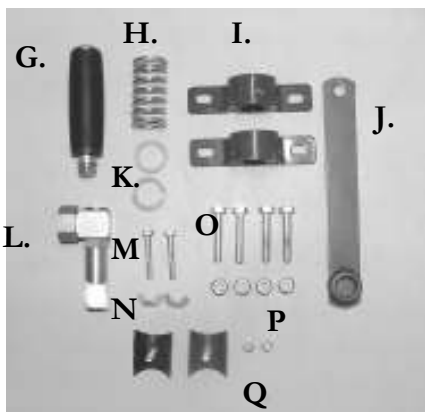

- G. Handle with bolt (1)
- H. Spring (1)
- I. U-Bushing (2)
- J. Crank Handle (1)
- K. Plastic Spacer Washers (2)
- L. Brass Swivel (1)
- M. Handle Bolts (2)
- N. Handle Wing Nuts (2)
- O. U-Bushing Bolts (4)
- P. U-Bushing Nuts (4)
- Q. Rubber feet w/nuts (2)

Model 880 Cart: Holds up to 300' of 5/8" hose.

Model 1180: Holds up to 200 ft. of 1" hose. All plumbing on the 1180 cart is for 1" fittings.

1. Layout all parts and fasteners. Make sure all parts are accounted for. If any part is missing please contact Liberty Garden Products at 866-820-5805. **Do not contact the retailer.** You can also visit our website, www.libertygardenproducts.com, for more instructions, pictures and helpful hints.

2. Attach rubber feet to bottom of frame. Insert bolts into bottom of frame. Attach nuts and tighten. See Figure 1.



2

3. Turn frame over and attach U-Bushing (I) to frame using 2 U-Bushing bolts (O) and nuts (P). Hand tighten only. See Fig. 2. Set frame aside.



Fig. 2

4. **Spool Assembly:** Insert brass swivel (L) thru bushing (I) and screw into the galvanized T on the spool. Tighten using wrench. Fig 3. Do not over tighten, this could damage threads. Be sure to use Teflon tape on threads.



Fig. 3

5. Turn Spool around and slide a plastic spacer washer (K), spring (H) and another plastic spacer washer over the pipe. Fig 4.



Fig. 4

6. **Attaching spool to frame:** insert "pipe" end of spool into U-bushing that is attached to frame. Fig. 5.



Fig. 5

7. On the other end of spool, align the U-bushing with the holes in the frame and insert U-bushing bolts (O) and attach nuts (P). You may need to put pressure on the spool by compressing the spring to align holes. Tighten all 4 U-bushing nuts with a wrench. Fig 6.



Fig. 6